


EXPLODED VIEW

ADDITIONAL FRAME INFORMATION	
MODEL	RAMPAGE MY25
AVAILABLE FRAME SIZES	20", 24", 26" SHORT, 26" MEDIUM, 26" LONG
S.H.I.S.	ZS44/28.1 ZS56/38.1
MAX. FORK LENGTH (mm)	20" - 390, 24" -460, 26" - 482
MAX CHAINRING SIZE	30T
OLD (mm)	135
CHAIN LINE (mm)	52
REAR BRAKE MOUNT	IS
SEATPOST DIAMETER (mm)	27.2
REAR AXLE TYPE	10mm NUTTED
ISCG MOUNTS	NO
BOTTOM BRACKET	BSA THREADED

DRIVETRAIN DETAILS			
FRAME SIZE	CHAINRING	SPROCKET	CHAIN LENGTH
26"	30T	14T	82
24"	30T	14T	78
20"	30T	13T	68

ITEM NO.	SUPPORT PART NUMBER	QTY.	DESCRIPTION
1	CONTACT CUSTOMER SERVICE	1	FR, ASSY, Rampage MY25
2	913600-013	2	AXLE TENSIONER ASSEMBLY, RAMPAGE MY25
3		2	TENSIONER DIAL, RAMPAGE MY25
4		2	M4X8MM SOCKET HEAD CAP SCREW
5	915000-012	1	SEAT CLAMP ASSY, NORCO, POST 27.2, ST OD 31.8, H15.2

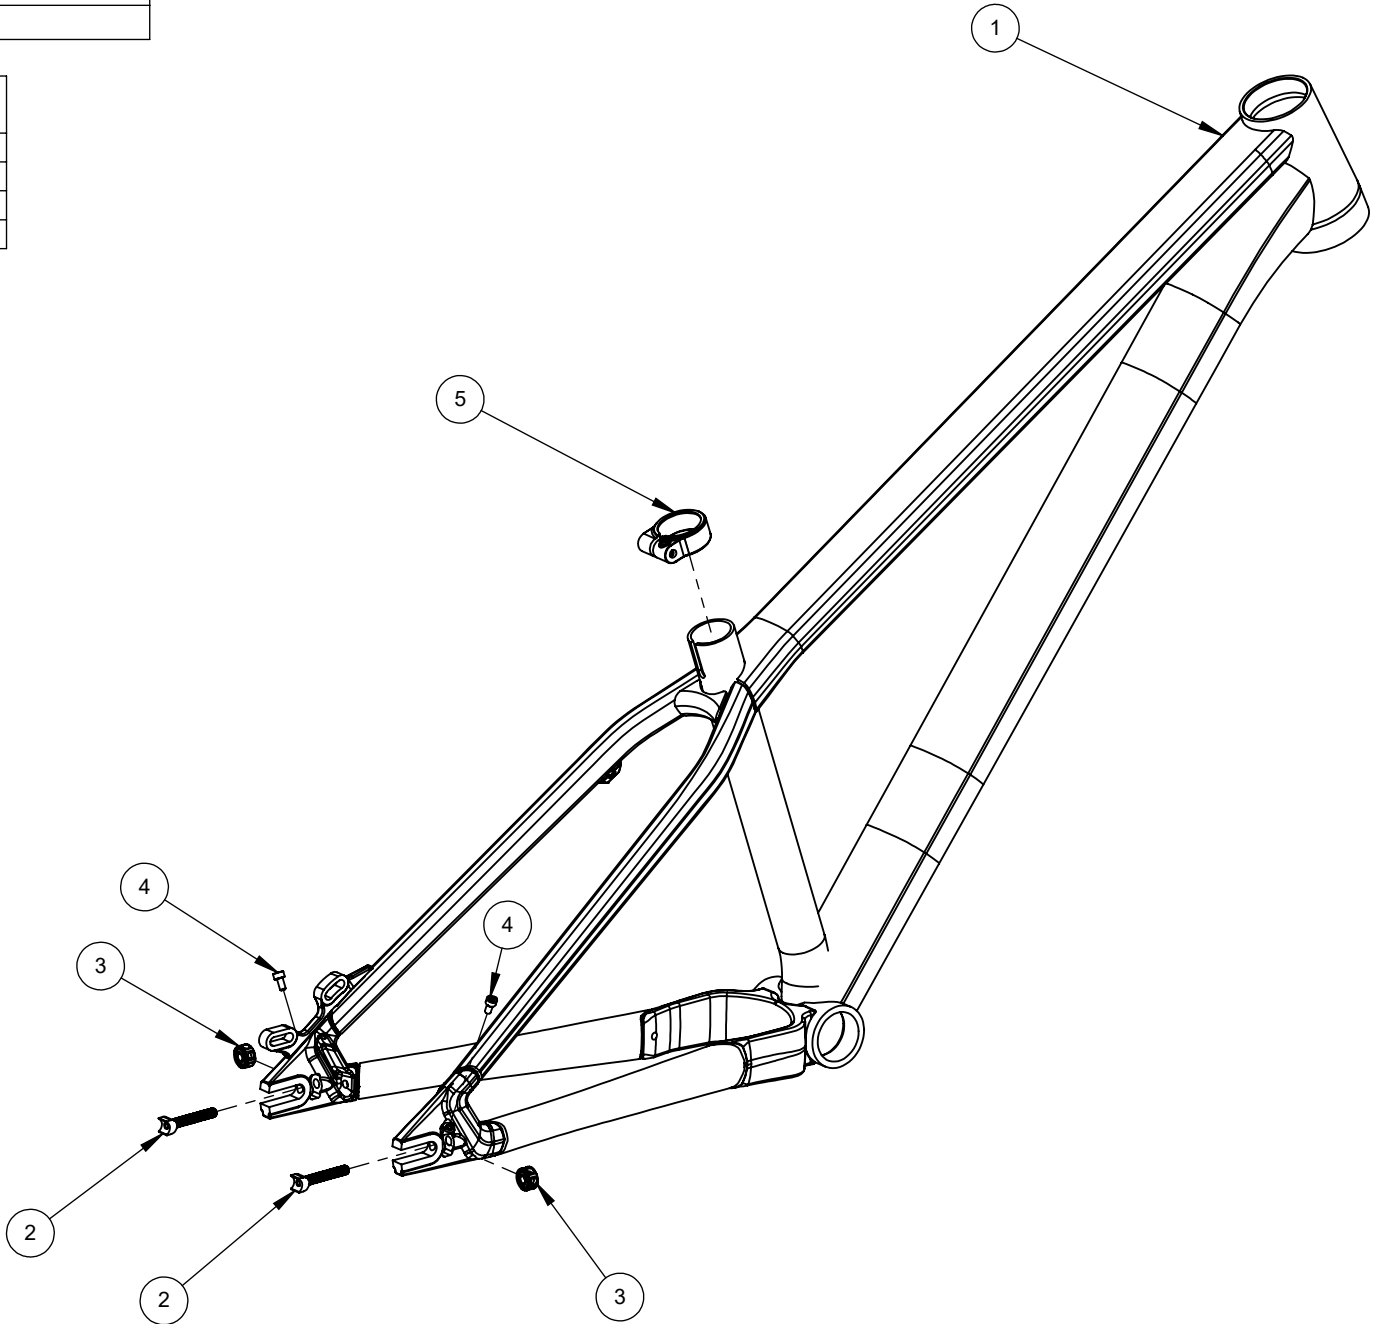

ASSEMBLY INSTRUCTIONS:

1. INSERT (3) INTO FRAME, HOLD WITH FINGERS
2. SLIDE (2) INTO DROPOUT HOLE IN AXLE SLOT FROM REAR
3. TURN (3) CLOCKWISE WHEN VIEWED FROM THE FRONT UNTIL (2) BOTTOMS OUT IN DROPOUT
4. THREAD (4) INTO THREADED HOLE IN DROPOUT AND TURN (3) COUNTERCLOCKWISE UNTIL ONE OF THE HOLES IN (3) LINES UP WITH (4).
5. CONTINUE THREADING (4) INTO DROPOUT UNTIL IT BOTTOMS OUT, ONLY TIGHTEN TO 2Nm.
6. REPEAT FOR THE OTHER DROPOUT ASSEMBLY

CHAIN TENSIONING INSTRUCTIONS:

1. UNSCREW (4) UNTIL (3) CAN SPIN FREELY
2. TURN (3) (ON BOTH DROPOUTS) CLOCKWISE WHEN VIEWED FROM FRONT UNTIL (2) BOTTOMS OUT IN DROPOUT
3. ASSEMBLE WHEEL INTO FRAME WITH CHAIN WRAPPED AROUND CHAINRING AND REAR SPROCKET
4. TURN (3) (EVENLY ON BOTH DROPOUTS) COUNTER CLOCKWISE, WHEN VIEWED FROM THE FRONT, UNTIL CHAIN IS ALMOST TIGHT
5. ENSURE THERE IS EVEN SPACING BETWEEN THE TIRE AND THE FRAME ON BOTH SIDES OF SEATSTAYS AND CHAINSTAY YOKE
6. MAKE ADJUSTMENTS TO EACH SIDE OF (3) TO STRAIGHTEN WHEEL IF NECESSARY
7. PUSH WHEEL AXLE FORWARD IN DROPOUTS TO ENSURE IT'S CONTACTING (2) ON BOTH SIDES
8. ADJUST (3) ON THE RIGHT HAND DROPOUT TO THE CLOSEST HOLE FOR (4) TO FIT INTO
9. TIGHTEN (4) SO THAT IT GOES INTO THE HOLE IN (3), TORQUE TO 2Nm
10. REPEAT STEPS 8 & 9 FOR LEFT HAND DROPOUT ASSEMBLY
11. TIGHTEN THE AXLE BOLTS TO 30Nm

